

Energy

Page 3

Home Savers



Beauti-Glow

5 Lb Fire Logs

Burns for approx. three hours.

5515-196-6

109



Aluminum/Foam Pipe Wrap

Stops water pipes from freezing and sweating. Indoor & Outdoor use. Fire retardant. 2"x 15'. 5510-075-30

149

Fiberglass Poly Back Pipe Wrap

3"x 20'. 5510-057-30

155



Water-Pipe Insulation

• Stops heat loss • Water-proof • Prevents condensation • Closed cell polyethylene • 1/2"x 10' 5510-039-10

429



Adhesive Duct Tape

Seals ducts etc. PVC 2"x 30' 5540-195-1

.88

2"x 30' 5540-186-50


168



Weather Strip

Stops drafts just by pressing into cracks. Acts as weather strip and caulking. 5574-032-24


.69

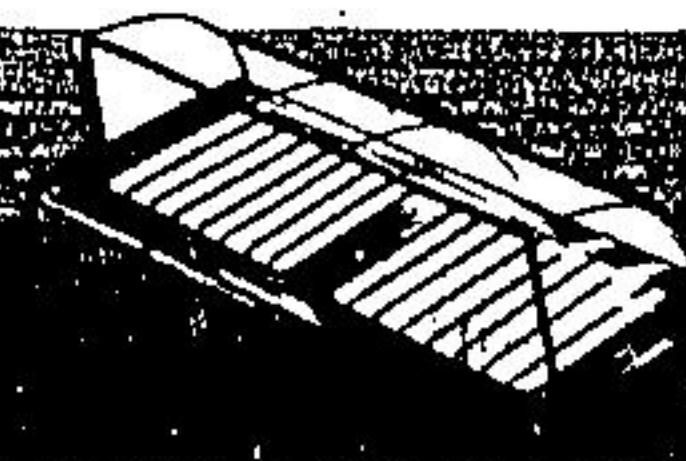

Air Deflector

Adjusts from 10" to 14" for floor and high or low air registers. 5538-304-20

2 For **129**

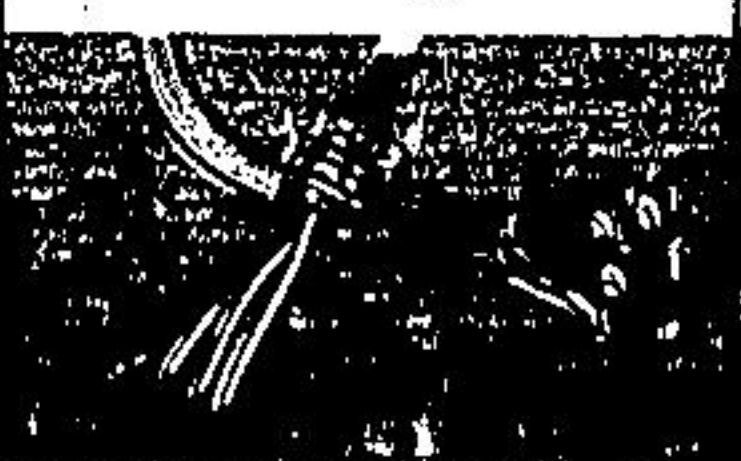

Dryer Cord


4-wire. 2 metre. 3626-552-10

599

Range Cord

1.75 metre. 3626-650-10

739

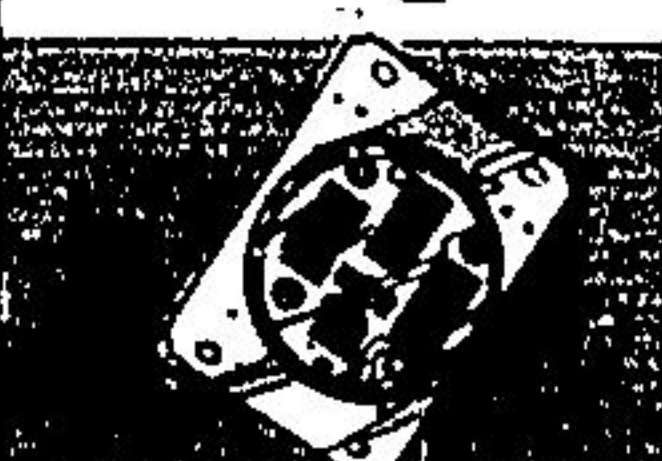


50 AMP Range Receptacle

3626-605-10 or 30 AMP

Dryer Receptacle

3626-507-10

248

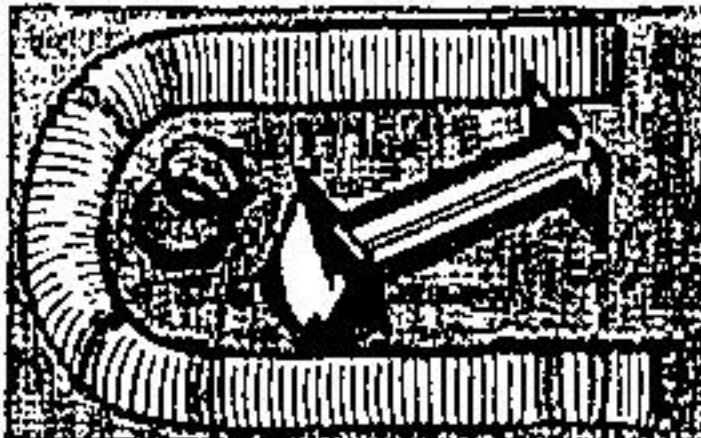


Dryer Vent

4"x 6' Kit

Easy to install. Flexible. 3721-100-10


395

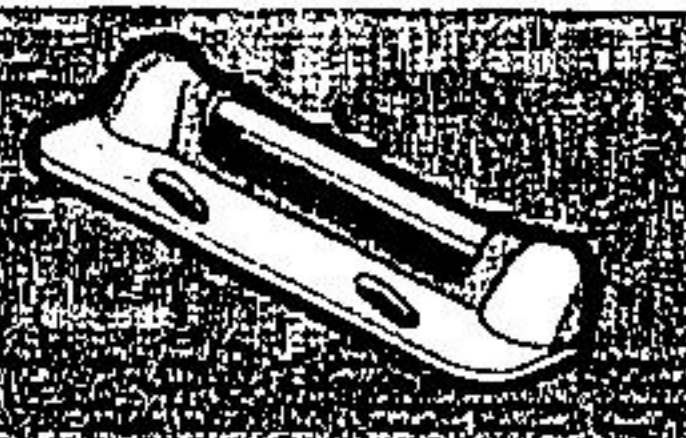

Replacement Door Strike

2334-833-100

.98

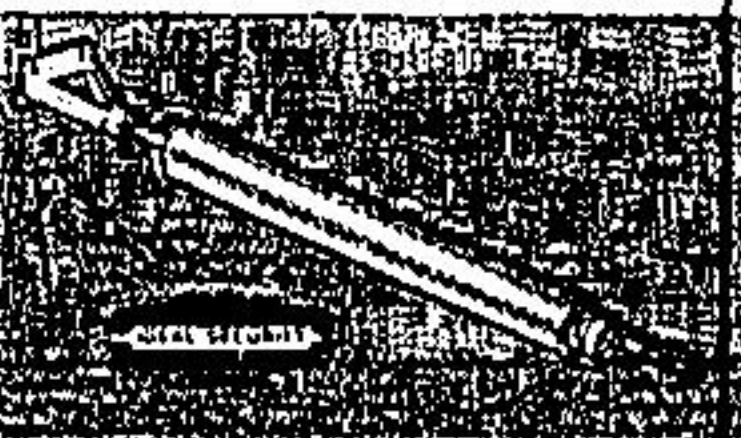

Silent Door Closer

with adjustable closing power. 2334-325-10

598



Push-Button Latch

for doors 1 1/8" to 1 3/4" thick. 2334-726-10

578

K - Kerf a saw cut. Because saw teeth are bent slightly to the sides, the kerf is wider than the thickness of the blade.

L - Lintel a horizontal timber over a door or window opening which supports the walls directly above the opening.

M - Mortise a hole cut in a piece of wood to receive another piece of wood or a lock etc. A common joint is the mortise and tenon. The tenon goes into the mortise.

N - Nosing a wood edge that has been rounded, like the front edge of a stair-tread.

O - Oilstone a whetstone used for finish sharpening of cutting tools. It is treated with oil to prevent the tiny steel particles ground off tools from clogging the pores of the stone.

P - Parquet a wood floor constructed of small blocks laid in a decorative pattern.

Q - Quirk a little groove separating a molding or bead from an adjoining surface. Also a groove separating two parts of a molding.

R - Rottenstone a very fine abrasive powder (finer than pumice) used of give furniture and cabinet work a beautiful finish.

S - Shake a thick, handsplit shingle with a very rough texture. Usually made from red cedar, shakes are produced in random widths from 4 to 14 inches and in lengths of 18 or 24 inches.

T - Tang the slender projecting part of a tool like a file, chisel etc. which is inserted into a handle and holds the two pieces together.

U - Upright any vertical timber in a structure.

V - Veneer a very thin sheet of beautiful wood glued to a base of interior wood. Since a wood veneer of, say, mahogany costs less than a solid piece of mahogany of the same thickness, they are extensively used in furniture making.

W - Warp as a mount is a bend or twist in a piece of wood. Warping results from the uneven shrinkage of wood cells when wood dries out.

X - X use in laying out. When an incorrect line is made put an x over it so that the correct line next to it will not be confused.

Y - Yew an evergreen tree, usually from the west coast whose wood is often used in tool handles or cabinet work.

Z - Zebra wood a west african cabinet wood with a straw-colored background and parallel brown stripes.