
HOME

AND PATCH CONCRETE



Enlarge and undercut the crack with cold chisel and hammer

■ When the enlarged area has been thoroughly cleaned, cement adhesive should be applied with a brush. This is the same cement adhesive described for use when repairing sidewalks. If you do not have a cement adhesive, the area can be primed with a thin creamy mixture of portland cement and

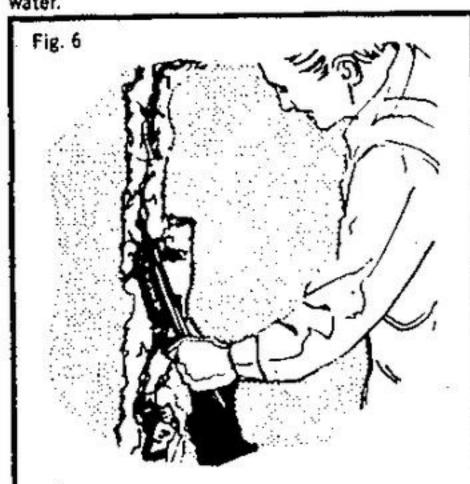

Clean the undercut area with a stiff wire



the newly applied patch from drying out

Be as cool as a cucumber

Fruits and salads are cool

and refreshing. And when

and save electricity.

you stay away from the oven to

prepare meals, you also stay cooler

Drink up. Ah, there's nothing

like a tall, cool, refreshing drink to

make things cooler. But remember

when the refrigerator door is left

open, valuable energy escapes.

In some cases, the patch can be adequately made by simply moistening the area thoroughly before filling the crack with the concrete patch, (Fig.

7). Although the moistening is important, the concrete adhesive or the mixture of portland cement and water is much more desirable than merely moistening with plain water.

Regular concrete patch of the ready-mix type can be used for small cracks in cement walls. This mixture should be forced into the cut away area with a pointing trowel, (Fig. 8). Be sure to use enough pressure to force the patch mix into all the cut away areas in the crack being repaired.




Apply the concrete patch mix with pointing trowel

M You may find it difficult to conceal the patch since the finish on the old concrete is often difficult to duplicate. In order to conceal the patch you will simply have to experiment with matching the original linish by roughing up the patched area while it is still workable. An old broom, a float or any other tool can be used to create the desired rough finish.

■ Holes and broken areas in concrete walls can be patched by simply clearing out the hole in basically the same way you would undercut a crack.

After the hole has been thoroughly cleaned and cut away, the cement adhesive should be applied and the patch mix inserted into the hole, (Fig. 9), with a pointing trowel.

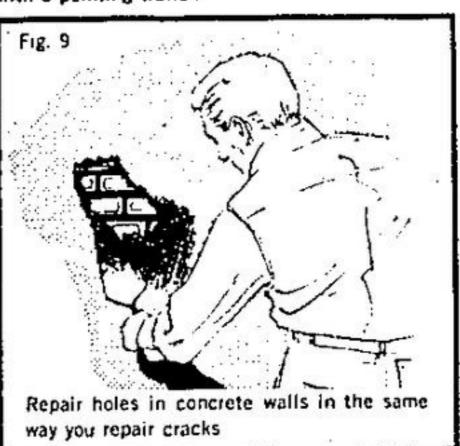

■ The area should be moistened and cured after the patch is applied in the same way cracks in cement driveways or sidewalks are moistened and

5. PATCHING HOLES IN WALKS OR DRIVEWAYS

How to be

a cool customer

this summer.

with lighter colours. It's also cool

Use your air

conditioner wisely

Make sure it fits

tightly in the window. Keep

regularly. If you leave your

house for part of the day.

cut back the air conditioning.

Going on vacation? Turn it

off completely.

your doors and windows

closed. Clean the filters

Keep it light

and breezy. It's

lighter clothes

cool to wear

How you patch holes in sidewalks and driveways will depend on the depth and the size of the hole. If the hole is extremely deep and large, it will be

necessary to undercut it, as previously described. and fill the area with a gravel mix.

■ However, small shallow holes in flat surfaced concrete such as driveways, patios or sidewalks, (Fig. 10), can be easily repaired with latex cement. If the hole is small and shallow no chipping away

After the damaged area has been thoroughly brushed with the wire brush, a lighter brush should be used to remove the loose particles which were dislodged by the wire brush, After these particles have been brushed away, the area to be repaired should be thoroughly washed with a garden hose.

After the cleaning is done, you are ready to apply the latex cement. This usually comes in five pound cans with the liquid latex in a smaller can inside the large can.


■ The liquid latex is poured into the larger can where it is thoroughly mixed with the latex cement to form a heavy paste. This paste should be applied to the area to be patched in approximately 1/4" layers. Each layer should be smoothed out with a trowel and allowed to partially dry before the next

layer is applied. Build up the latex cement 14" at a time until you bring it up to the same level as the original concrete. It should then be smoothed out with a trowel or float as you would finish regular concrete, 6. REPAIRING BROKEN CORNERS

ON CONCRETE

■ Broken corners on concrete, (Fig. 14), can also be repaired with latex or epoxy cement mixes. A broken corner should be thoroughly cleaned and maistened before the mixture is applied.

After the corner has been thoroughly brushed and washed, the build up of latex or epoxy cement mixes should be made applying 14" at a time as previously described. If the area to be repaired is quite large, it may be necessary to build a small form to hold the mix while it is drying. Small, repair jobs can be completed without the construction of a form.

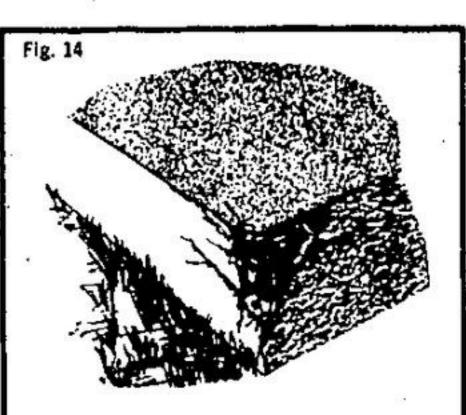

Broken corners on concrete can be repaired with latex cement




Buildall's Overall Exterior Fix-up Sale means great savings.

The bargains are fremendous now at Buildall on outdoor home improvement needs. We're offering you our best overall selection, our best overall quality, plus our best overall savings. And of course, as

always, you can count on Buildall for lots of helpful advice. Start your outdoor home improvement projects now with a visit to Buildall.

SALE PRICES GOOD TILL JULY 1919.

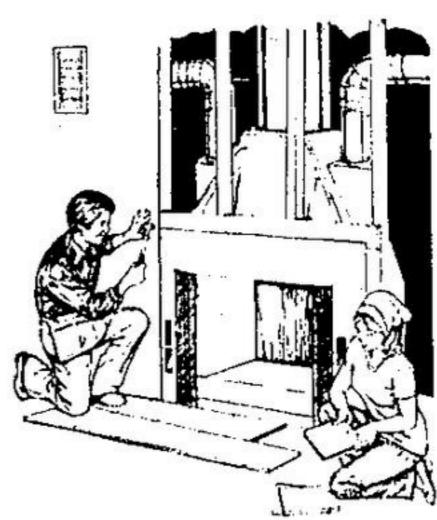

The built-in fireplace

Team work will have it in place with ease.

It's easier than you think to install this built-in freplace. especially when everyone lends a hand. The only limit to its beauty is your imagination. It installs anywhere and you can decorate if any way you please - with brickfacings, wall covering panelling or paint. We have it all at Buildall!

(Not Eractly As illustrated)



years of trouble-free service, maximum convenience and attractiveness. Each door is pre-assembled in its own frame, ready, for installation

Vinyiglide Patio Doors

Featuring maintenance-free, solid vinyl surfaces that look like wood Vinyl's unique insulating properties plus double weather-stripping and tempered safety insulated glass help reduce fuel costs, minimus condensation and liest Doors can be reversed to open left or right Scipen panel included

Sale Priced Frame Size: 6'x6'9' Frame Size: 5'x6'9'

Woodlite Patio Doors Made with real pine. Wood is treated to resist weathering Safety insulated glass, double weatherstripping and a thermal barrier act as insulators. Slide open easily on strel tollers. Double lock gives added protection. Screen panel included.

Sale Priced Frame Size: 5'11's x6'9'/s Frame Size: 6'17's x6'9'/s

28950

37950

Franklin Fireplace

3-Piece Bask in its warm


tere & a functional and versalis

regiace made of suthernic cast con Use it as an open kreplace OF Chies the doors and you have In enclosed heater 26 mile opening Grate in-cluded The Franklin Fregrate # exempt from provincial sales las

fane advantage of our sale price

Accessory Package hts most Frankins

A 6 Bean pol with led B Swing bracket holds pot or C Barbecue grit swings out

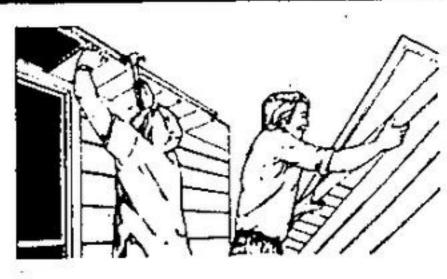

Prefinished Aluminum Soffit and Fascia

Put an end to the yearly problem of painting the solfit and fascia of your home. It's simple to install Every component is designed with a generous, built-in margin for error

White Vented Soffit

17 wide x 126 long

6" wide x 10" long

Improves insulation officiency

Install it right over old soffit. Interlocking panels are totally vented with bridged perforations. Deep "V" grooves give extra strength and rigidity. Panels easily anap together.

White Fascia

Installs in less time than it takes to scrape and re-paint the wood

No painting necessary Easily installs. 399 plece

White Horizontal Siding

Free Installation Guides available

Goes up quickly, with just a hammer, nails and saw. Adds new beauty and value to your home. Covers 100





Bulldall Tar Base Sealer .. Now at Buildall

Restores the appearance of your driveway and protects your driveway from gas and pilapilis Goesoneasily, dries to a flat, long-lasting finish Covers apploximately 500 089

4 gallon can Cash & Carry

Armstrong

Accotone

The sasiest flooring ever

ideal for beincoms,

kitchens, dens or halls.

Cushion construction means

greater walking comfort.

available from inventory

Cash & Carry

Colours and patterns as

Flooring



Buildall White Exterior House Paint Sale Buildail exterior paint is guaranteed top quality. And right now it s

priced for top savings! Exterior Flat Latex
A superb list linish for wood, masonry, stucco, asbestos, shingles, brick, metat or stone. Exterior Gloss Latex Provides a beautiful gloss finish for wood or

Alkyd Gloss Non-chalking One Coat White Ories to an attractive tlat linigh. Can be applied to most exterior surfaces

Value Stain

Cash & Carry

Choose from Codar, Redwood or Walnut Low Price

Cash & Carry



Fertilizer to help your garden Cowns and gardens become more lush and grown with the added vilamin supplement of True Green forblizer, Available in 40 lb. bags which covers up to 4,000 sq. ft.

True Groon 12-6-6 799 ideal for the garden True Green 10-6-4 299 (with 2-4-D Weed Killery. Cath & Carry 64EEN CHOSS 695

with biller



Waferboard The multi-purpose panel Low-cost use for indnors or out Resists weather, warping Takes paint or stain beautifully Ideal for pate pinecy walls, pool en-

closures, fencing, cottages, barns, garages. 4"x8"x"/4" Cath & Carry On Sale



Beautiful Carpet Specials Add delectes has to your deco-

rating with carpet ideal for rec room, bedrooms hats, bechers, dens l'aty to vistal - pust unicel. stree Id and you are done I say to care for Rubber hacking adds cush on comfort undertoot 12 wide Choose from a host of colours and print designe in HOCK CAN'S CAMY Level Loop Print Design

Stock Colors Only



Premixed **Products** Make the job easier When you've got cement or mortar work to be done, Irust




water. For loolings. walks, posts of cament stape.

a complete line of premixed products for do-il-yourself nome renovations. Concrete Mix Ideal for masonry. brick, block repair work

97 and building ACTON - 12 Church St.

PHONE 853-1660 FRIDAY: 1:00 A.M. - 1:00 P.M.





SATURDAY: 8:00 A.M. - 5:00 F.M.

DELIVERY AVAILABLE

HY8 3338

if your clothes dryer

is vented outdoors. Heat

released in your home. Better

still, hang your clothes outside

Keep your blinds down.

Keeping your blinds down or

has some cold logic to it. The

drapes drawn on the sunny side

heat of the sun is shut out while

the coolness is kept in. At night,

keep lights to a minimum It's

cooler and saves electricity.

to dry.

and moisture won't be

easier than you think

FRIDAY: \$:00 A.M. . 7:00 P.M. SATURDAY: 1:00 A M .- 5:00 P M.

PHONE 877-2207

GEORGETOWN - 8 James St.

your hydro